



**ANCHOR UNIT DETAIL
TOP VIEW LEFT HAND**
(REINFORCEMENT NOT SHOWN)
TWO PIECE


NOTE: SET THE CONCRETE ANCHOR INTO THE EXCAVATION AS DETAILED. THE BOTTOM OF THE ANCHOR MUST HAVE A FULL AND EVEN BEARING ON THE SURFACE UNDER IT SO THAT IF THE CONTRACTOR ELECTS TO PLACE THE ANCHOR IN TWO SECTIONS, THERE WILL BE LITTLE OR NO DIFFERENTIAL SETTLEMENT. IF THE CONTRACTOR ELECTS TO PLACE THE ANCHOR IN TWO SECTIONS, PLACE THE TOPS OF BOTH SECTIONS ON THE SAME PLANE. AFTER THE ANCHOR IS IN PLACE, BACKFILL THE EXCAVATION.

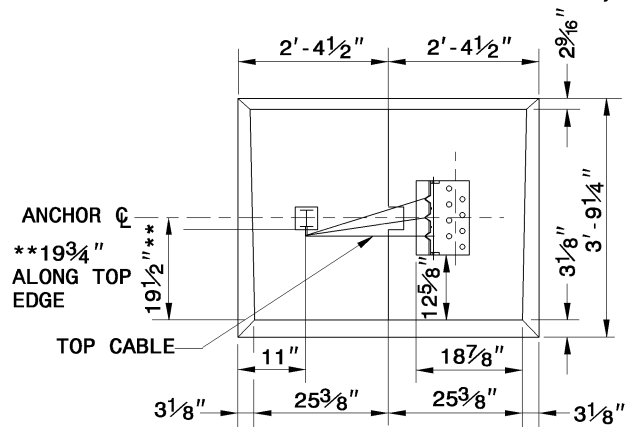

**ANCHOR UNIT DETAIL
TOP VIEW RIGHT HAND**
(REINFORCEMENT NOT SHOWN)
TWO PIECE

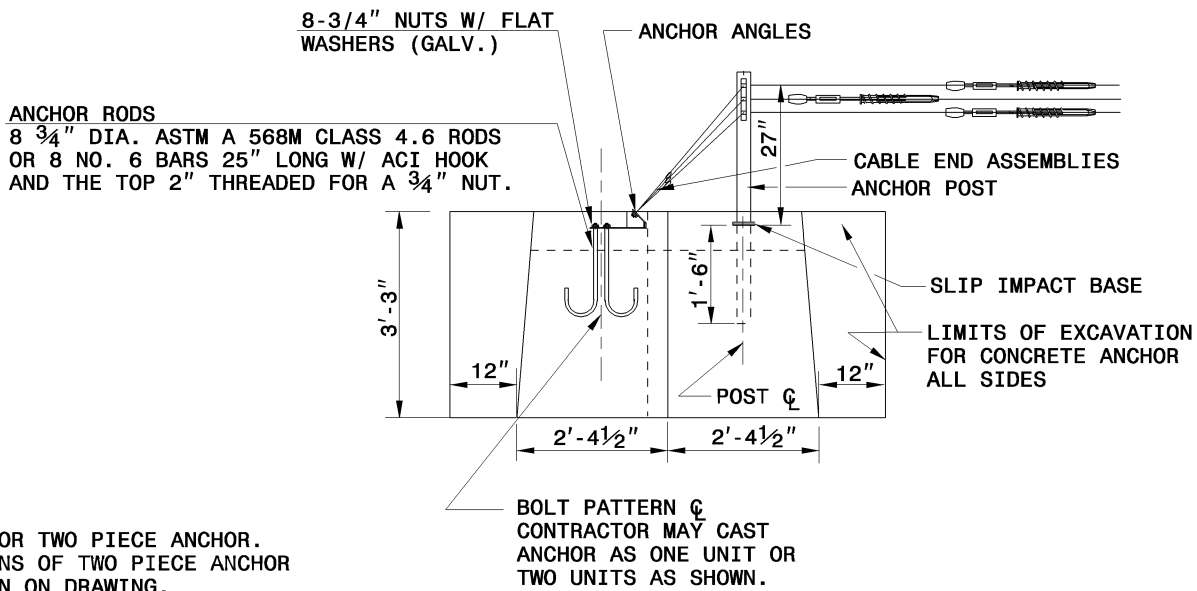

**ANCHOR UNIT DETAIL
LEFT HAND**
(REINFORCEMENT NOT SHOWN)

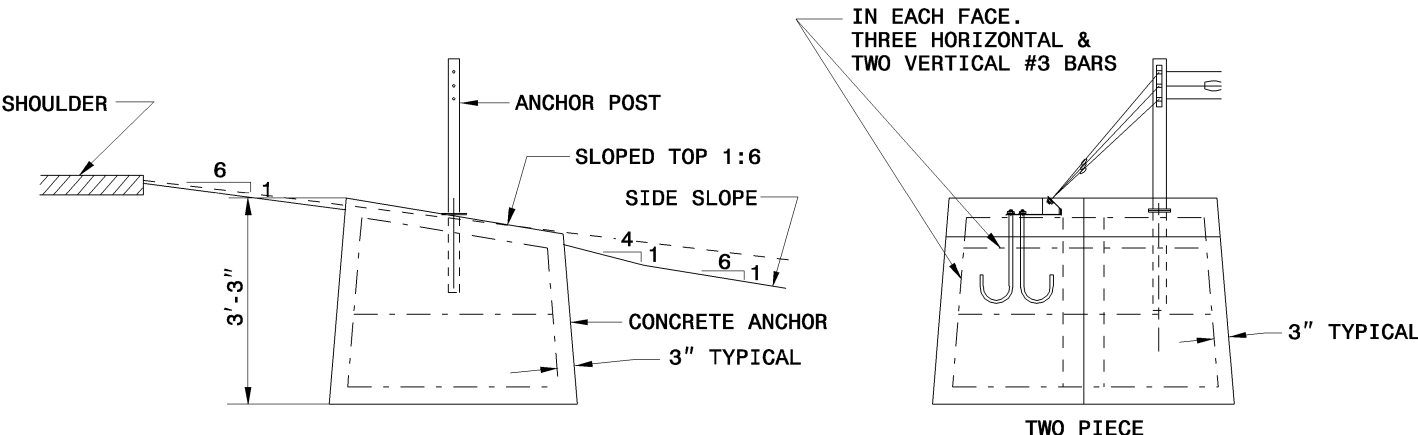

ANCHOR UNIT & RE-BAR INSTALLATION DETAIL